


FREE DOWNLOAD FOR ALL EBOX-44 USERS

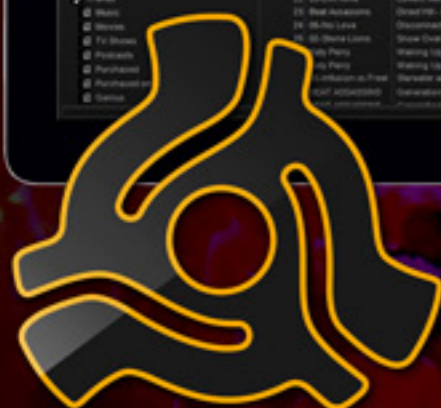

DEX^{LE}

PCDJ DEX2 LE

AUDIO & VIDEO MIXING

AVAILABLE FROM

WWW.ELECTRIXPRO.COM/EBOX44

Use this activation code to
unlock your copy of Dex LE:

N59A369C7LL7

Keep this code safe in case you
ever need to reinstall your software.

FEATURES

- 2 DJ decks with professional grade virtual mixer and playlists
- Video mixing (including pitch, break, reverse, scratch video)
- BPM Sync (one-click beat-matching) or Manual Mixing
- Automatic grid-based BPM detection
- Vinyl simulation including scratch, pitch, reverse play, and brake
- Seamless intelligent looping and beat-skip
- Headphone cueing and monitoring
- Support for professional VST effects
- Advanced auto-mixing including Mix-In/Mix-Out (Cue In/Out) points
- Automatic gain (volume control)
- Sample player – load up audio clips and trigger them
- Key-Lock (Master Tempo)
- Robust library with format filters, fast-search as you type
- Browsing system with unlimited lists, disk explorer, database
- iTunes library import support
- Load the whole song in RAM for instant access
- ASIO/Core Audio low-latency support
- Plays mp3, m4a, wav, aiff, ogg, cda, mpeg, avi, mov, mkv, wmv, flac
- Audio-CD direct play support
- Supports Karaoke CDG (MP3+G & Zipped MP3+G)

SYSTEM REQUIREMENTS

Minimum System Requirements:

2GHz Dual Core (Mac: Intel based CPU with OSX 10.6 or greater)
2GB RAM
Dedicated video card with 256MB required for video mixing.
DirectX or ASIO compatible sound card (Mac: Core Audio)
40 MB free on the hard-drive

Recommended Configuration:

2.5GHz Intel Core 2 Duo / Core 2 Quad / Core i3/i5/i7 / Amd Phenon
4 GB RAM or higher
Dedicated video card with 512MB required for video mixing.
DirectX or ASIO compatible multichannel sound card (Mac: Core Audio)
200 MB free on the hard-drive



ELECTRIX

iTunes is registered trademarks of Apple Inc. All brands and logos are trademarks of their respective owners. All images, features, and specifications are subject to change without prior notice.



QUICK START GUIDE

CONNECTIONS & SETUP

DJ'ING WITH AN EXTERNAL MIXER

1. Connect outputs 1-2 on the Ebox-44 to input channel 1 on your mixer.
2. Connect outputs 3-4 on the Ebox-44 to input channel 2 on your mixer.
3. Launch Dex LE.

If you are using DEX LE, you are ready to start DJing. Otherwise, follow the instructions included with your software.

DJ'ING WITH THE VIRTUAL MIXER

1. Connect outputs 1-2 on the Ebox-44 to your amplifier or powered speakers.
2. Connect your headphones to the headphone output on the front of the Ebox-44.
3. Open the Ebox-44 Control Panel and turn Hp Out 1+2 all the way down.

If you are using DEX LE, continue below. Otherwise, skip the next steps and follow the instructions included with your software.

4. Launch Dex LE. Open the Preferences (by clicking on the round icon in the upper left or right corner of the window) and select the 'Audio & MIDI' tab.
5. Uncheck 'Use an External Mixer'.

Close the Preferences window. You are ready to start DJing.

DJ'ING WITH TIME CODE

1. Connect your left turntable or CD player to input 1-2 on the Ebox-44.
2. Connect your right turntable or CD player to input 3-4 on the Ebox-44.
3. If you are using turntables, set the phono/line switch to phono.
4. Follow the 'DJing with an External Mixer' instructions above.

RECORDING

The Ebox-44 gives you many input and output options. The microphone and headphone levels are set directly on the front of the Ebox. Rear inputs and outputs are controlled via the included software Control Panel. Using the Control Panel, you can individually adjust the levels of inputs and outputs 1-4, and mix the sources going to the headphone output.

ELECTRIX

INSTALLATION

MAC: Insert the installation CD into your computer's CD drive and select the file "ELECTRIX_EBOX44_2.0.10.mpkg" to begin the installation. The installer will guide you through the installation process.

PC: Insert the installation CD into your computer's CD drive and select the file "Setup.exe" to begin the installation. The installer will guide you through the installation process.

UPDATES

Software and driver updates may occasionally become available. All downloads are located at www.electrixpro.com/downloads

SUPPORT

For Ebox-44 technical support visit www.electrixpro.com/support

For PCDJ Dex LE technical support visit www.pcdj.com/index.php/support/